

## Scope of Delivery



- Skimmer Body
- Collection Cup
- Airflow Meter
- Water Outlet
- i-Series Pump
- Silicon Tubes (2x)

## Before 1st Use




**1** Connect the parts of the PowerCone skimmer as shown at the picture.

**2** Get sure that the water-level in the sump is between 15 - 20 cm. Best waterlevel is 18cm.

**3** Put in the main plug. The skimmer will start immediately.

## Pump Controller

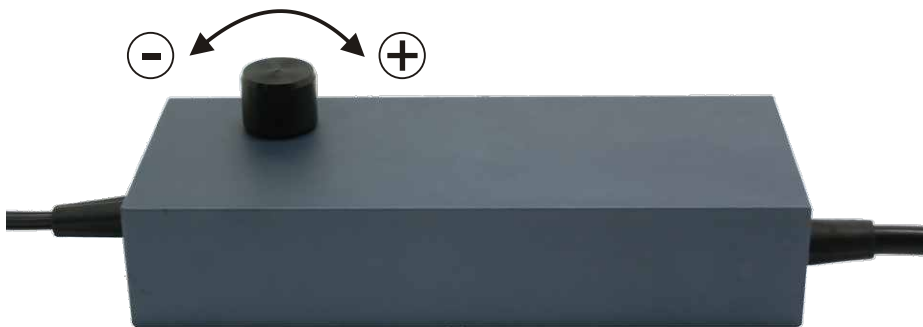

With the control knob you are able to adjust the performance.

Soft-start is integrated

Safety function:  
Automatically switch-off at a failure within 1/1000 sec. Restart after 8 seconds.

Thanks for purchasing a quality ATI Proteinskimmer.  
With the controllable pump of the i-Series you got the latest technology in skimming.  
Agressive or soft skimming - Just a short manual set up.